

## FRONT BRAKE MASTER CYLINDER

### DISASSEMBLY


Drain the brake hydraulic system.  
Disconnect the brake hose.

#### NOTE

When removing the brake hose bolt, cover the end of the hose to prevent contamination.

#### CAUTION

Avoid spilling brake fluid on painted surfaces.

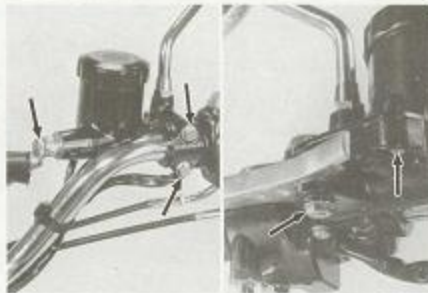

Remove the brake lever.

Remove the master cylinder.  
Remove the circlip from the master cylinder body.



Remove the stop plate, secondary cup and piston.  
Remove the primary cup, spring and check valve.

It may be necessary to apply a small amount of air pressure to the fluid outlet to remove the piston and primary cup.

